

Front Lift Kit Install

- Jack up the front of the ATV and remove both front tires
- Remove the lower shock mounting bolts
- Start to install the lift bracket by putting in the 2 bolts in the a-arm stabilizing holes as pictured below



- Now slid the bracket into place and insert the bolt through the stock shock mounting location, be sure to also include an aluminum spacer in the original shock mount

location



-Install the last bolt with the end of the shock in the new mounting location and tighten all the bolts





-Install the tires and the front kit is finished! Total install time 30 minutes

Rear Lift Kit Install

-Jack up the ATV, NO need to remove the tires but it does make it easier to install the kit.


-Remove the upper shock mounting bolts



-Re-route the rear diff vent hose as pictured below





-Bolt the bracket in place as pictured below, be sure to insert the aluminum spacers in the original shock mounting location

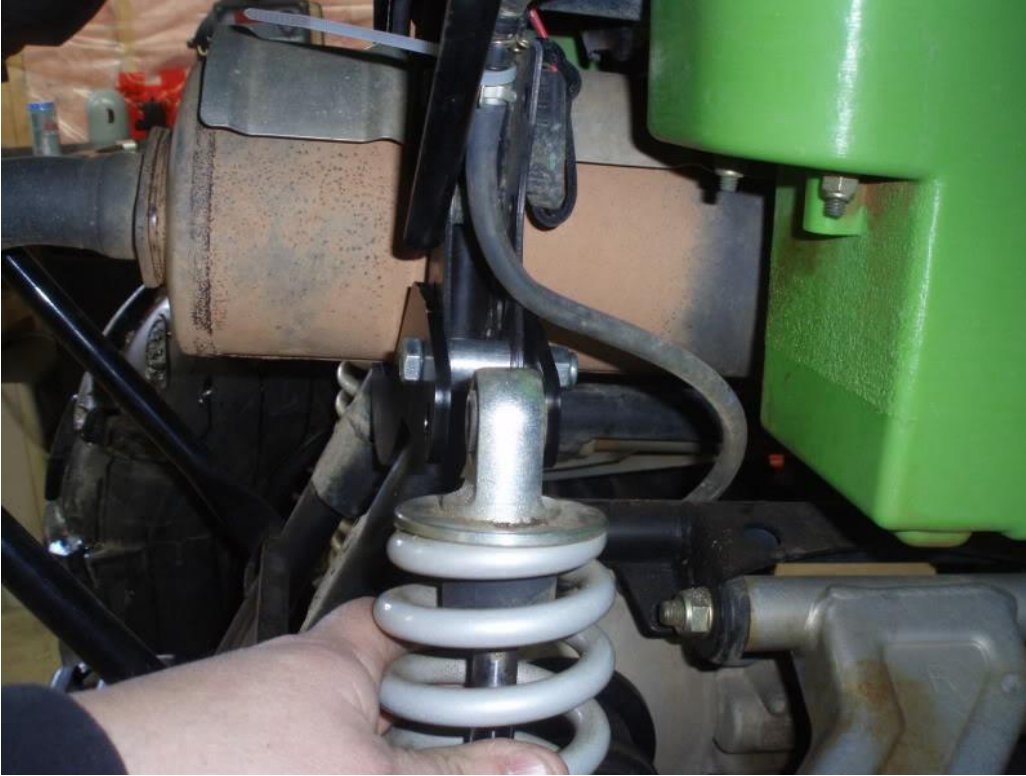

-Bolt the shocks into the new mounting location and tighten all bolts



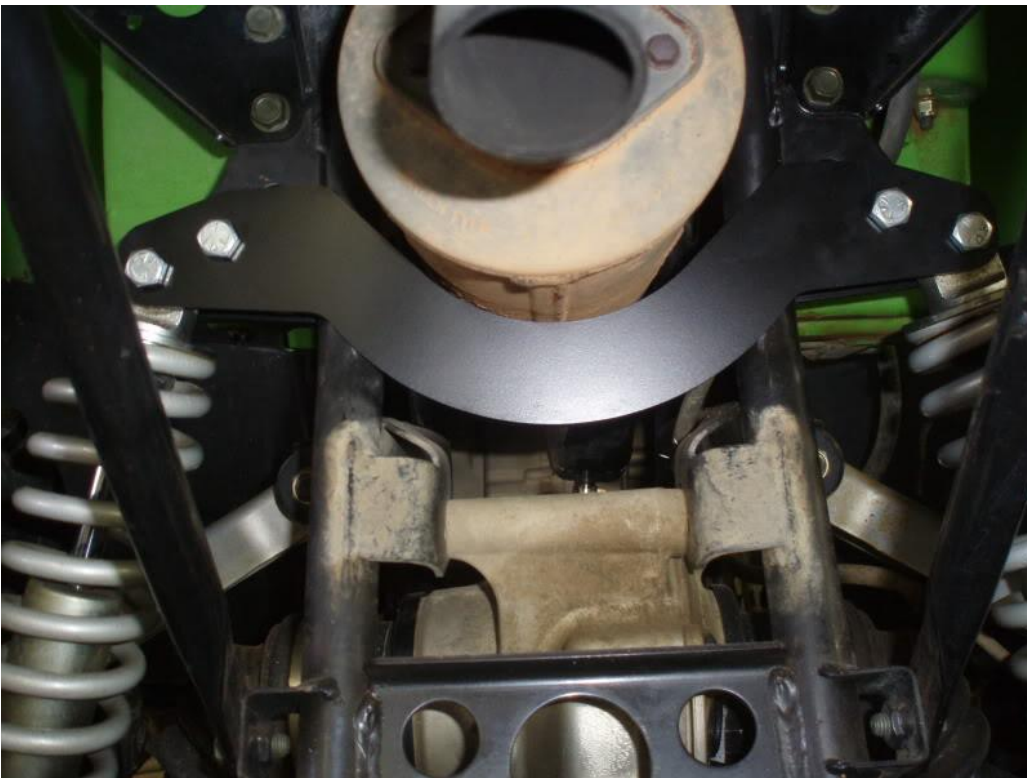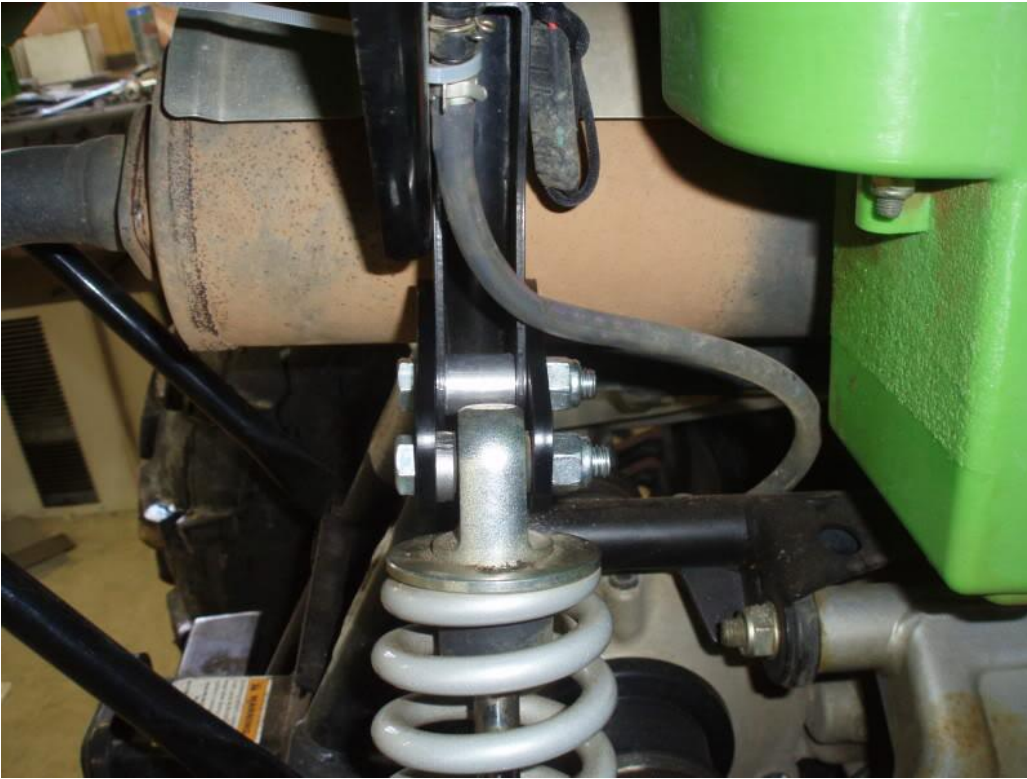

Finished! Total install time about 20 minutes