



## Can Am Outlander / Renegade GEN 1 Rear Diff Brace

- Remove plastic CV Boot Guards
- Some of the FACTORY bolts will be used for this installation and ALL of the factory nuts will be used for this installation.
- Take notice of the 2 smaller brackets, 1 is designed to work on the LEFT side and clear the rear brake caliper

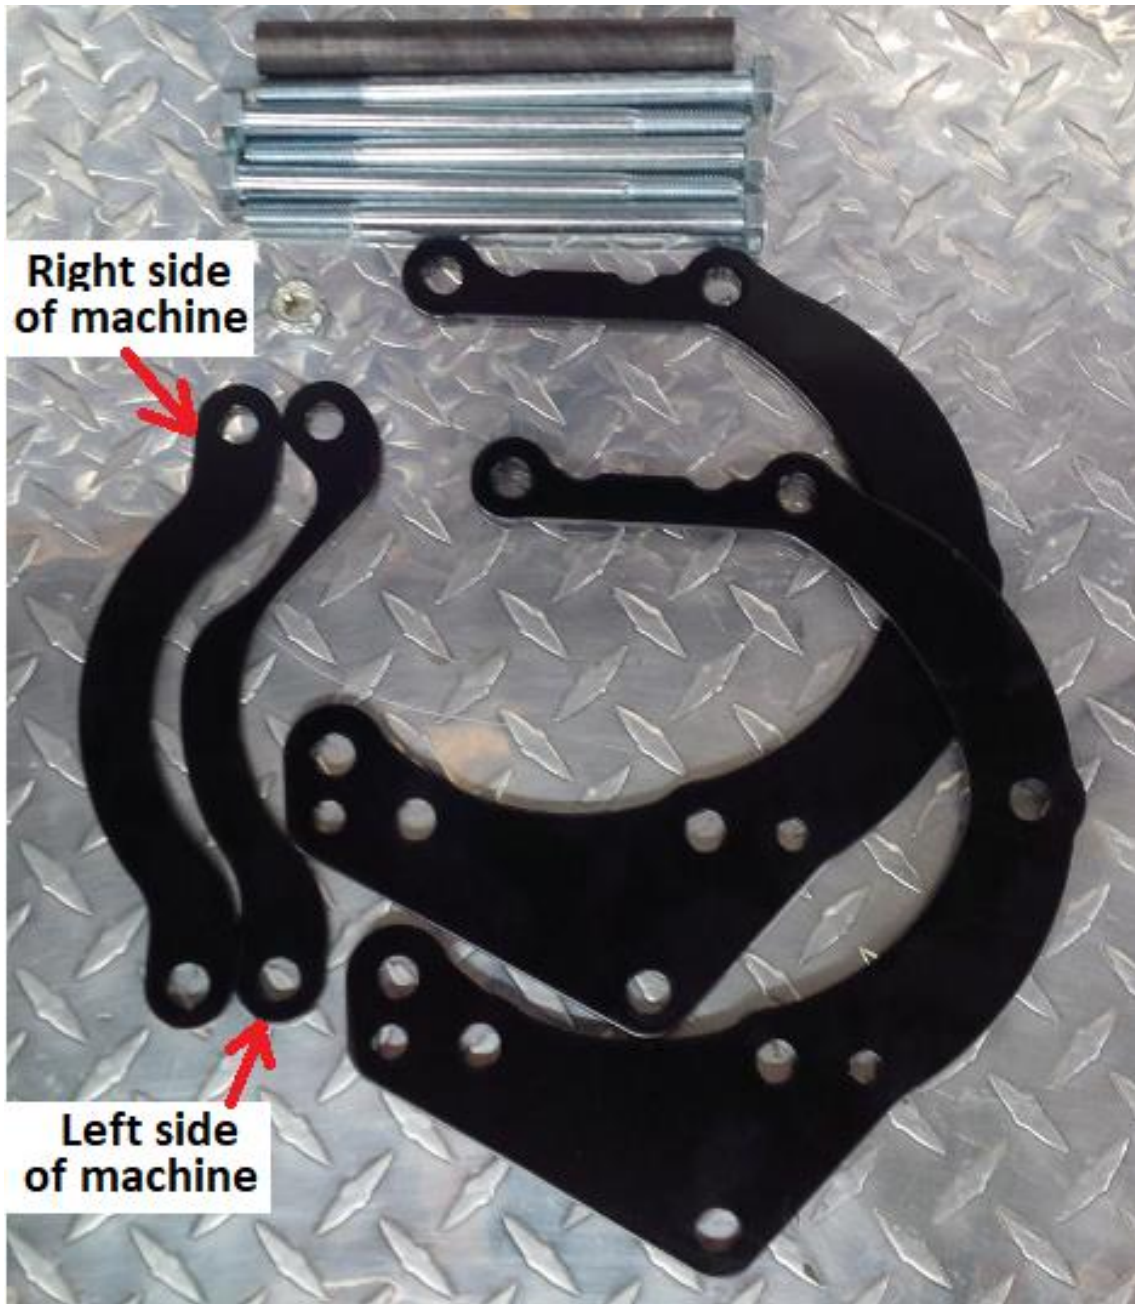

-This is the left side of the machine showing all the placement of all hardware.

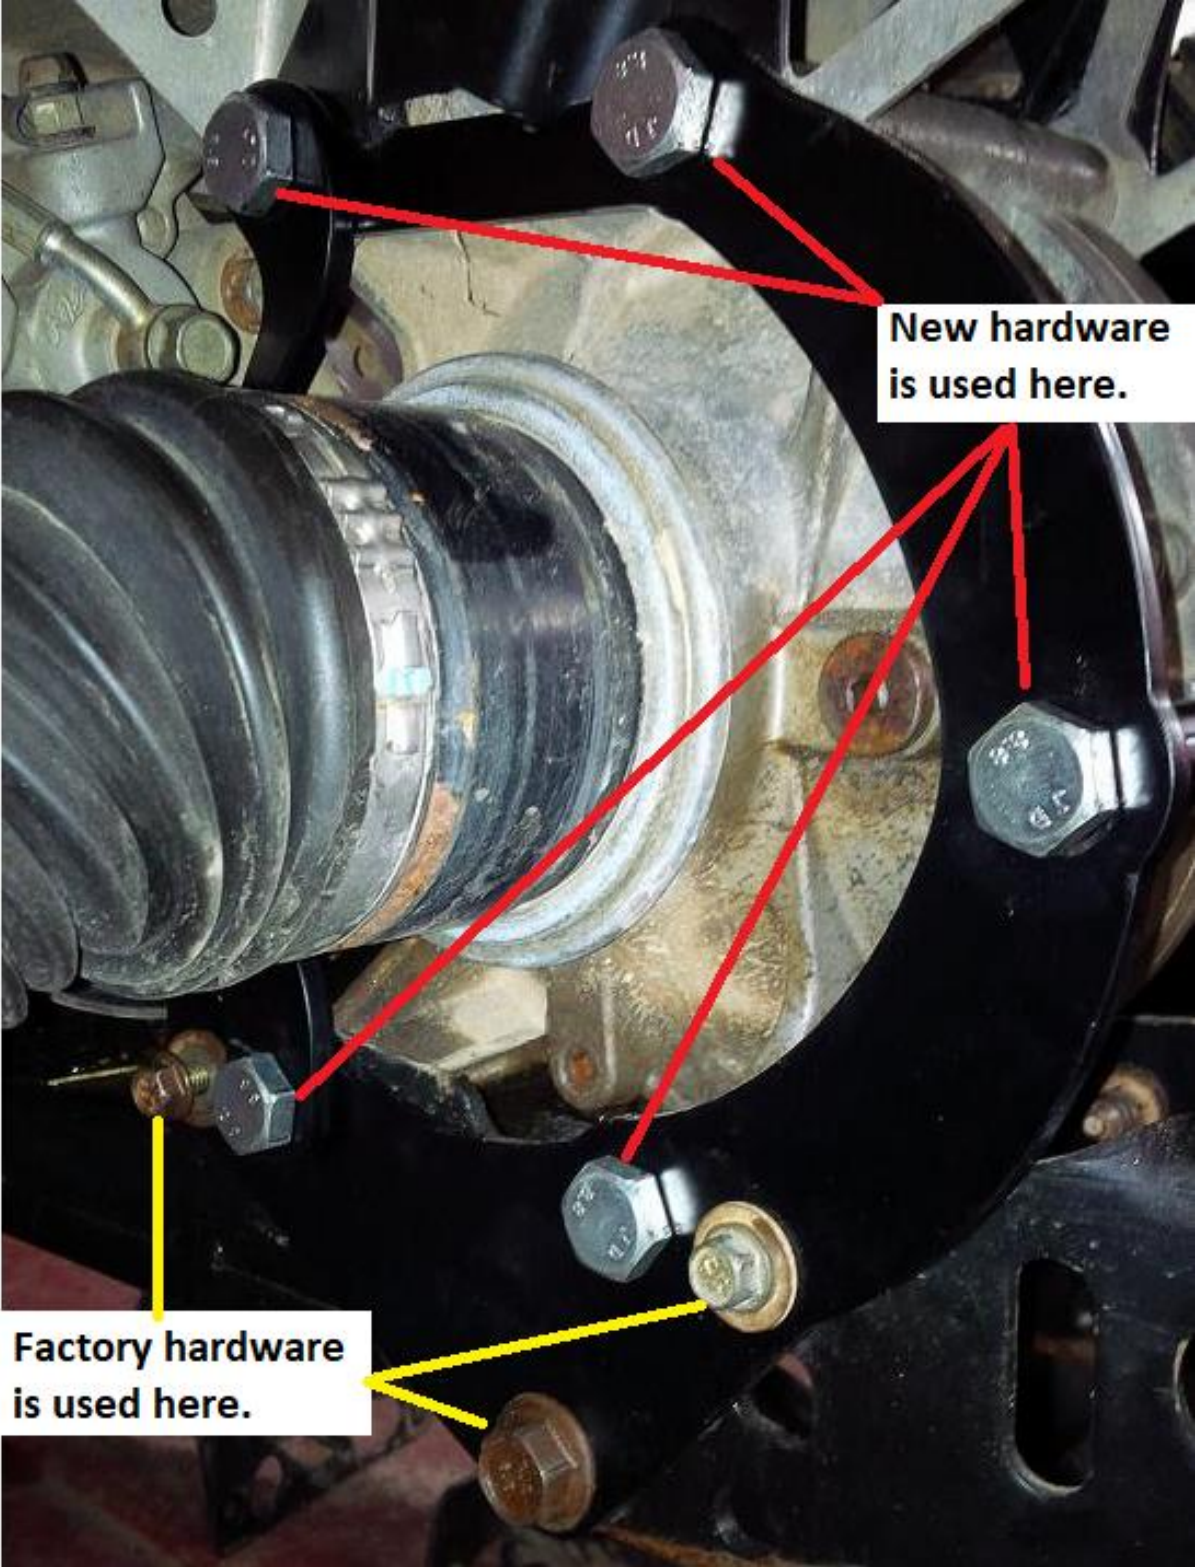

**New hardware  
is used here.**

**Factory hardware  
is used here.**



-Left side of machine showing the smallest bracket clearing the brake caliper.



-Right side of machine





-Rear of machine showing the 4.5" long cross bar between the left and right sides of the bracket.

