

## Parts List for RDC Rear Rack Bracket

- 1 - Powder Coated Rubberdown Customs Rack Bracket
- 4 - M6 x 25mm long SS Bolts
- 4 - M6 SS Nylock Nuts
- 24 - 1/4" SS Washers
- 8 - 1/4"x 1-1/2" long SS Bolts
- 8 - 1/4" SS Nylock Nuts

## Installation Instructions of the RDC Rear Rack Bracket


- Remove the 4 factory tie down
- Using the 4 pcs M6 x 25mm long bolts, with washers and lock nuts, bolt the bracket to the machine **(NOTE SOME MACHINES HAVE FACTORY 6MM THREADS ON THE FRAME, SOME MACHINES LIKE THE OLDER RENEGADE X MACHINES DO NOT HAVE THESE FACTORY 6MM THREADS SO LOWER WASHERS AND LOCK NUTS WILL BE NEEDED)**



-Using the 1/4" x 1-1/2" long bolts, washers and lock nuts, bolt the 2 aluminum rack supports (provided by your Can Am Dealer, part # 705005469 and part # 705005470) to the rack, also provided by your Can Am Dealer (part # 715001561 or part # 715001852, one is just a newer part # but the same part) but **ONLY** bolt the 4 outside bolts in place



- Place the rear rack onto the Rubberdown Customs Rear Rack Bracket and bolt it in place with the remaining 1/4" bolts, washers and lock nuts

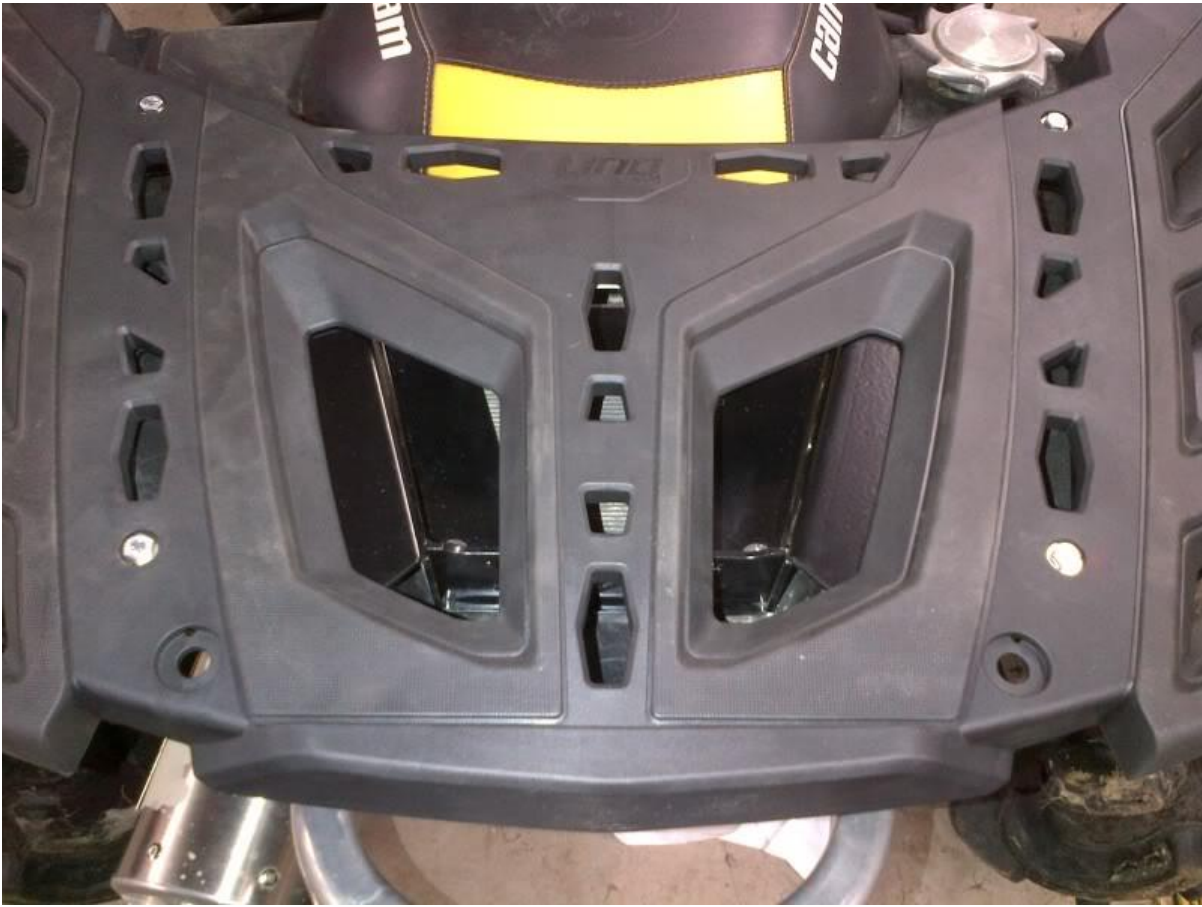

Finished!!!